

Инструкция по установке

RENAULT DUSTER

(2010-2022)

RENAULT KAPTUR

(2016-2022)

NISSAN TERRANO

(2014-2022)

DACIA DUSTER

(2017-2021)



Арт.: F.4711.001



MAX kg

X

MAX kg

D (kN)=

x 0,00981



MAX kg

+

MAX kg




1200 kg




75 kg

D = 7,2 kN


RENAULT KAPTUR (2016-2022)		☐
RENAULT DUSTER (2010-2015)		☐
RENAULT DUSTER (2015-2021) 2WD		☒
RENAULT DUSTER (2015-2021) 4WD		☐
RENAULT DUSTER (2021-2022)		☐
NISSAN TERRANO (2014-2022)		☒
DACIA DUSTER (2017-2021)		☐

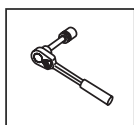


Вкрутить/выкрутить используя инструмент

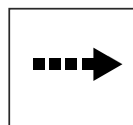


Движение

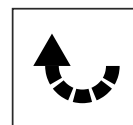

Поворот


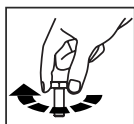


Вкрутить/выкрутить не затягивая

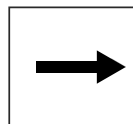











Расположение




Используемый инструмент:

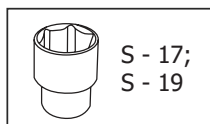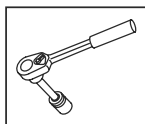

S - 17;
S - 19

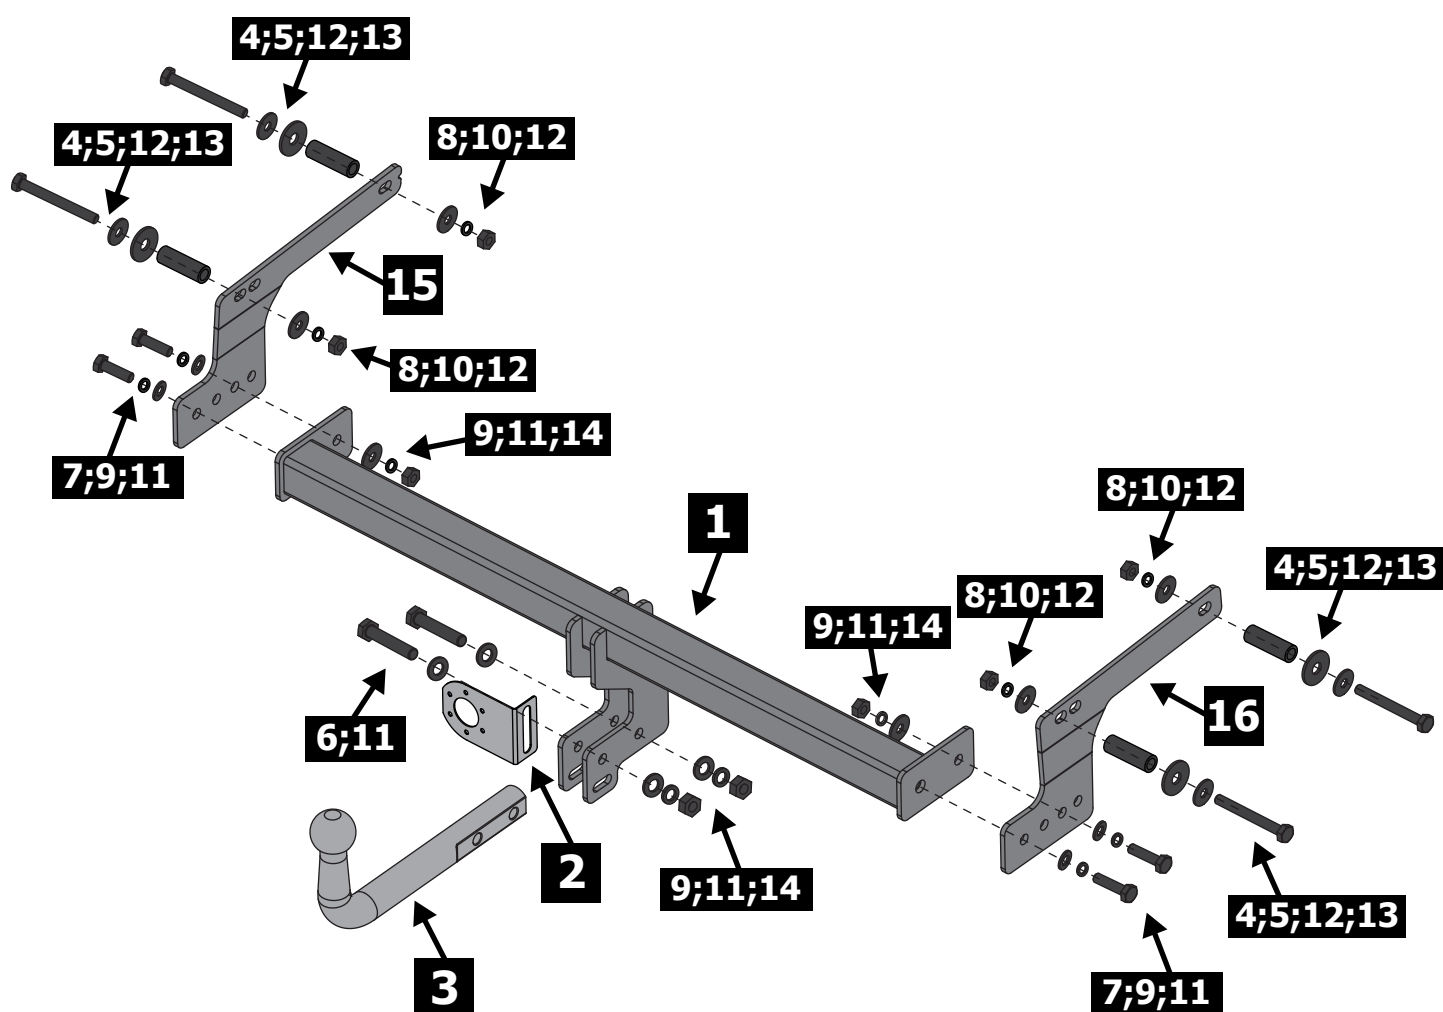


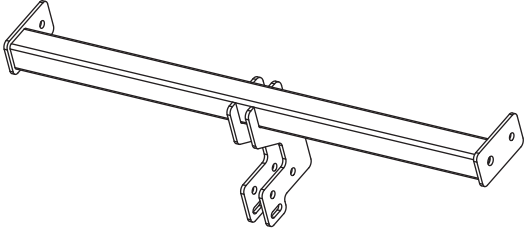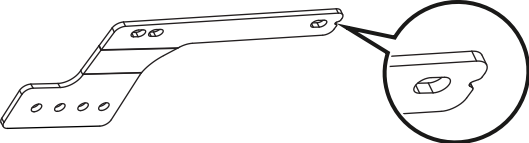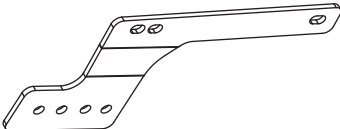1	x1	Балка	
2	x1	Подрозетник	
3	x1	Крюк	
4	x4	Втулка	
5	x4	M10x90	
6	x2	M12x1.25x70	
7	x4	M12x1.25x40	
8	x4	M10	
9	x6	Ø 12	
10	x4	Ø 10	
11	x10	Ø 12	
12	x8	Ø 10	
13	x4	Ø 12	
14	x4	M12x1.25	
15	x1	Кронштейн левый	
16	x1	Кронштейн правый	

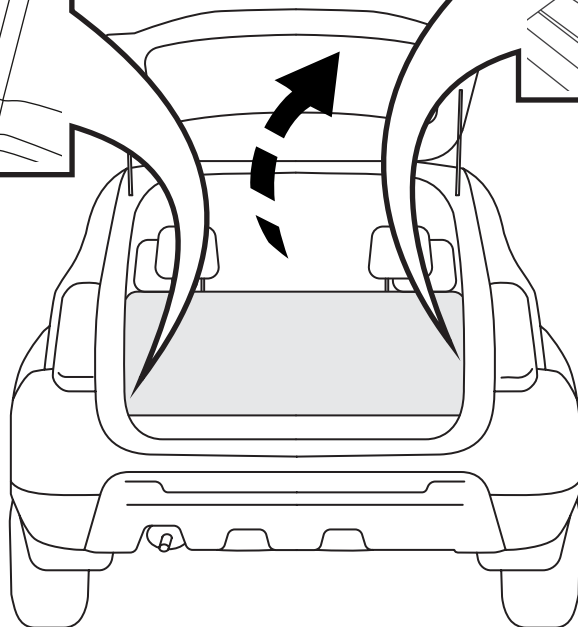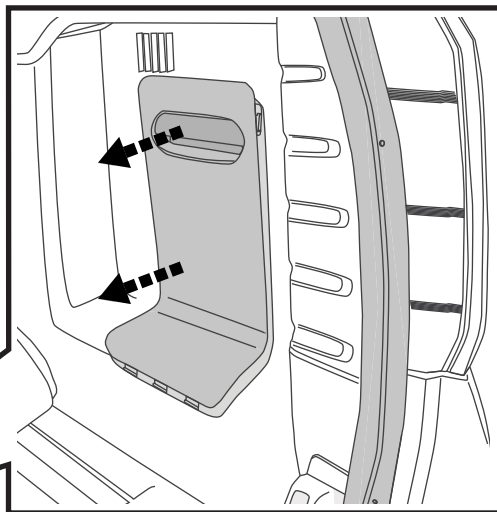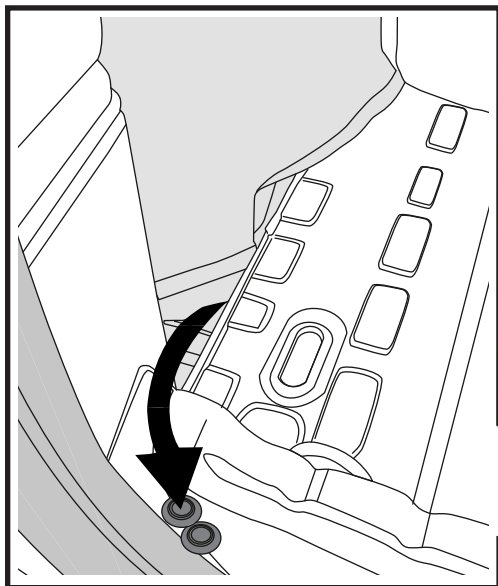


1

2WD/4WD

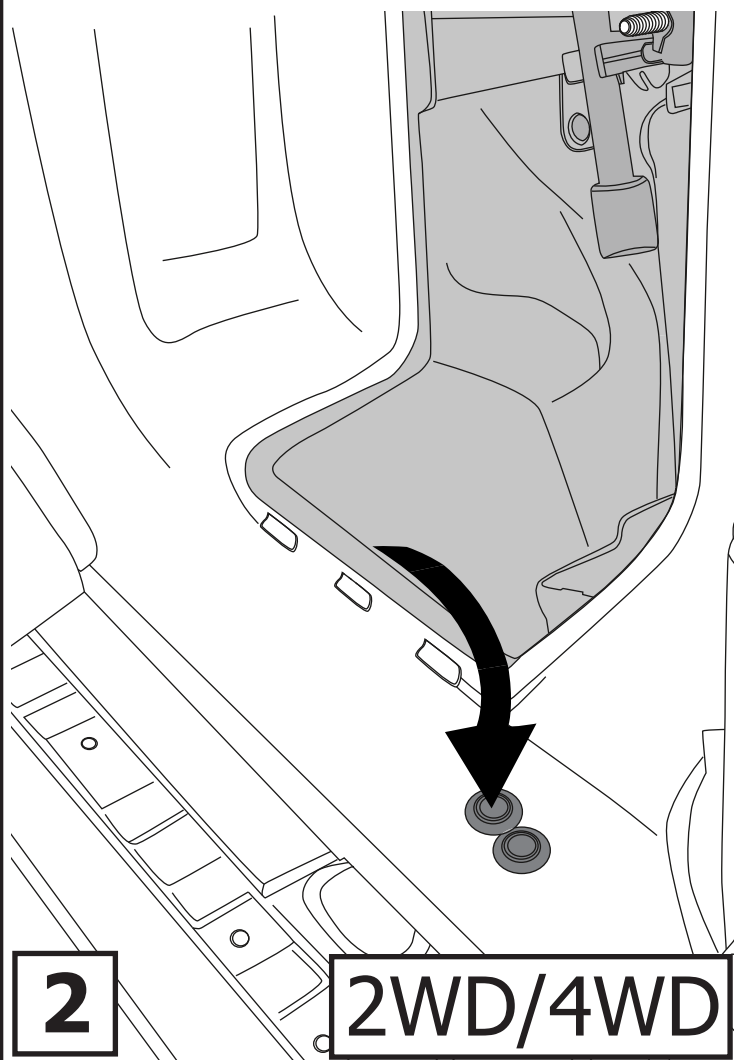


2

2WD/4WD

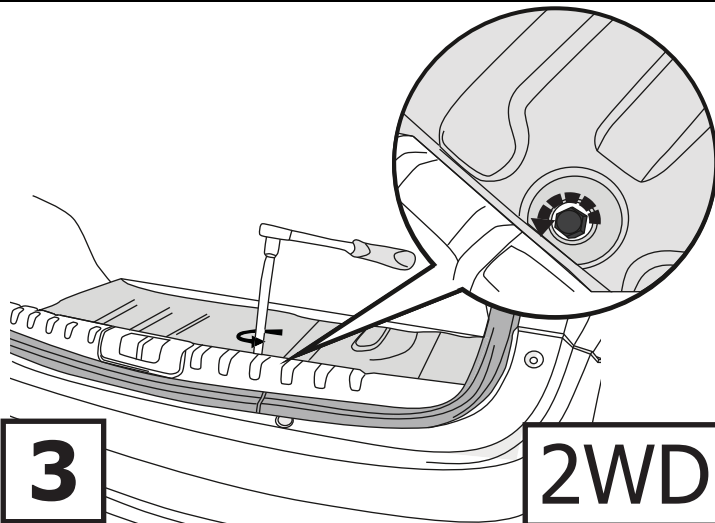






3






2WD

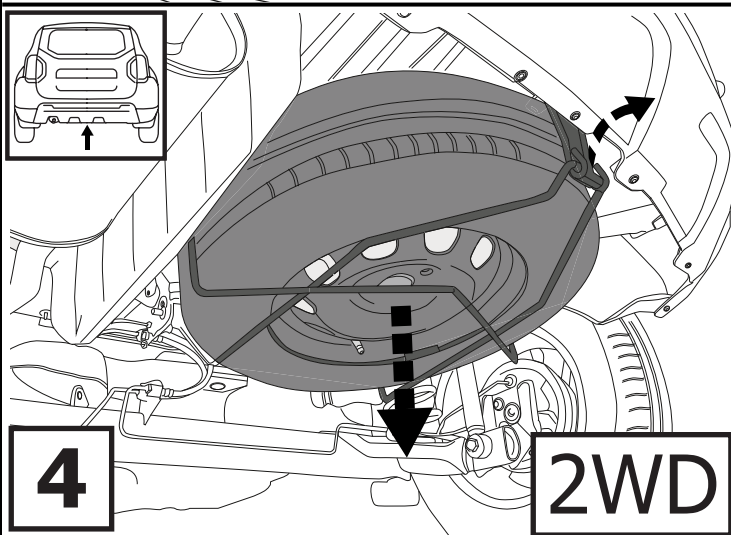

4


2WD

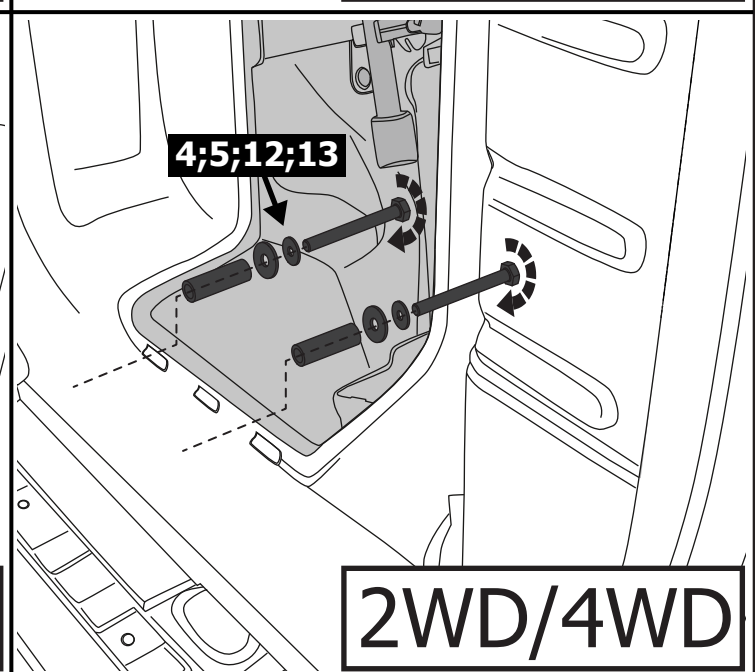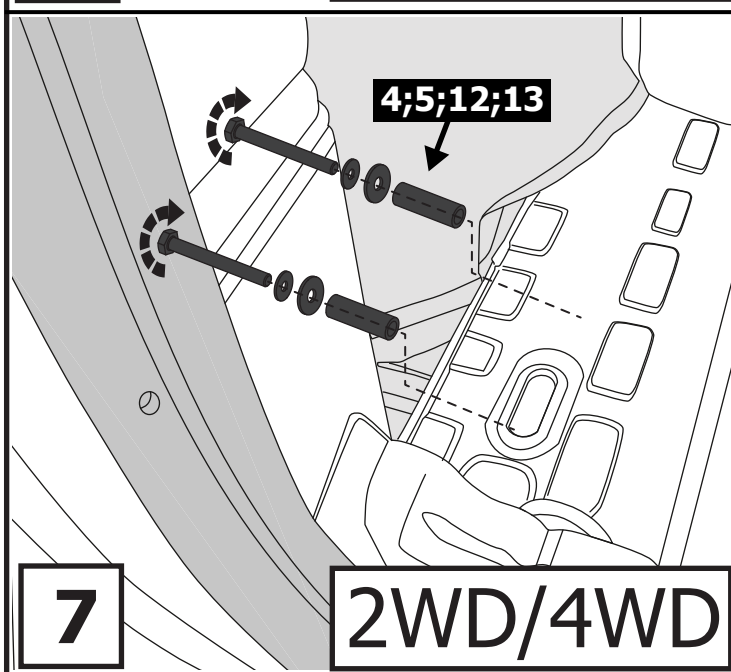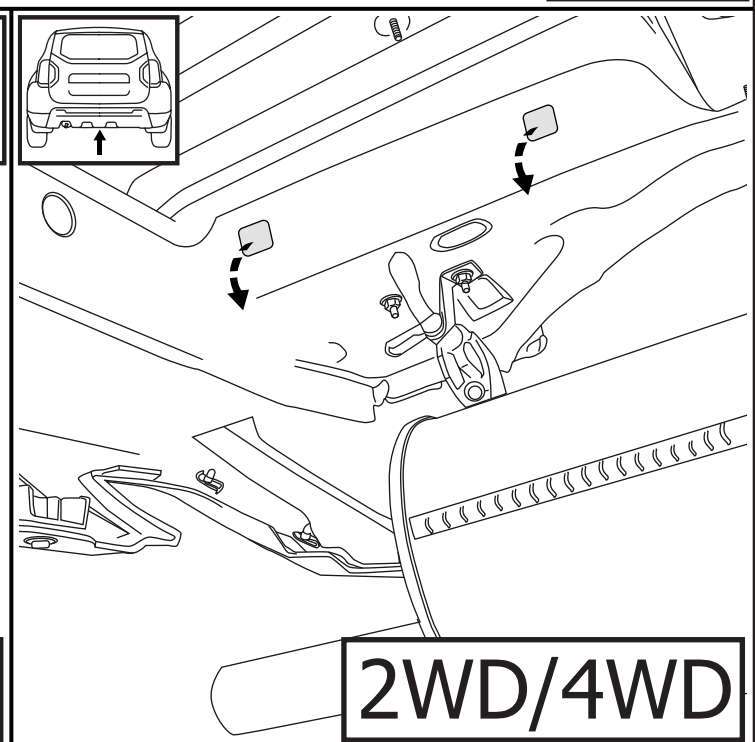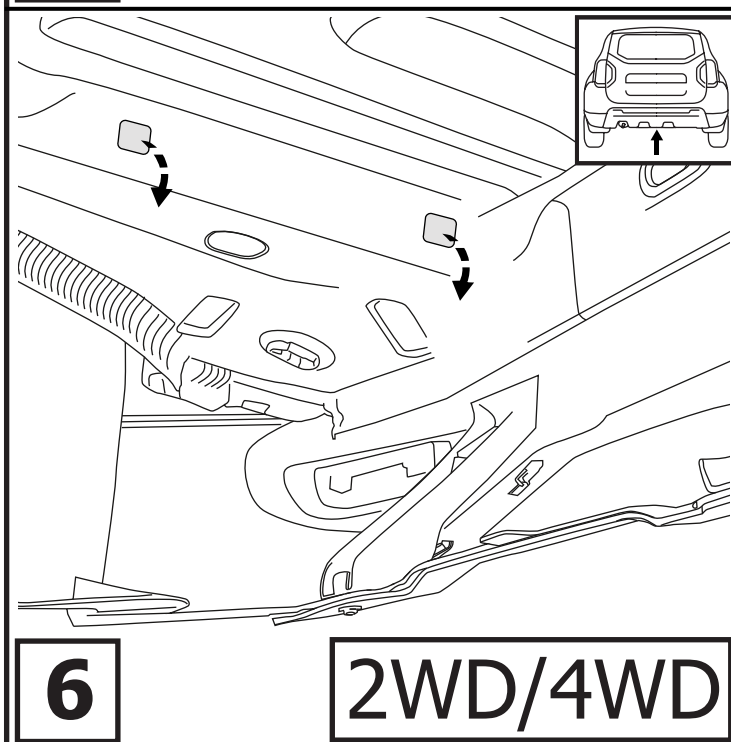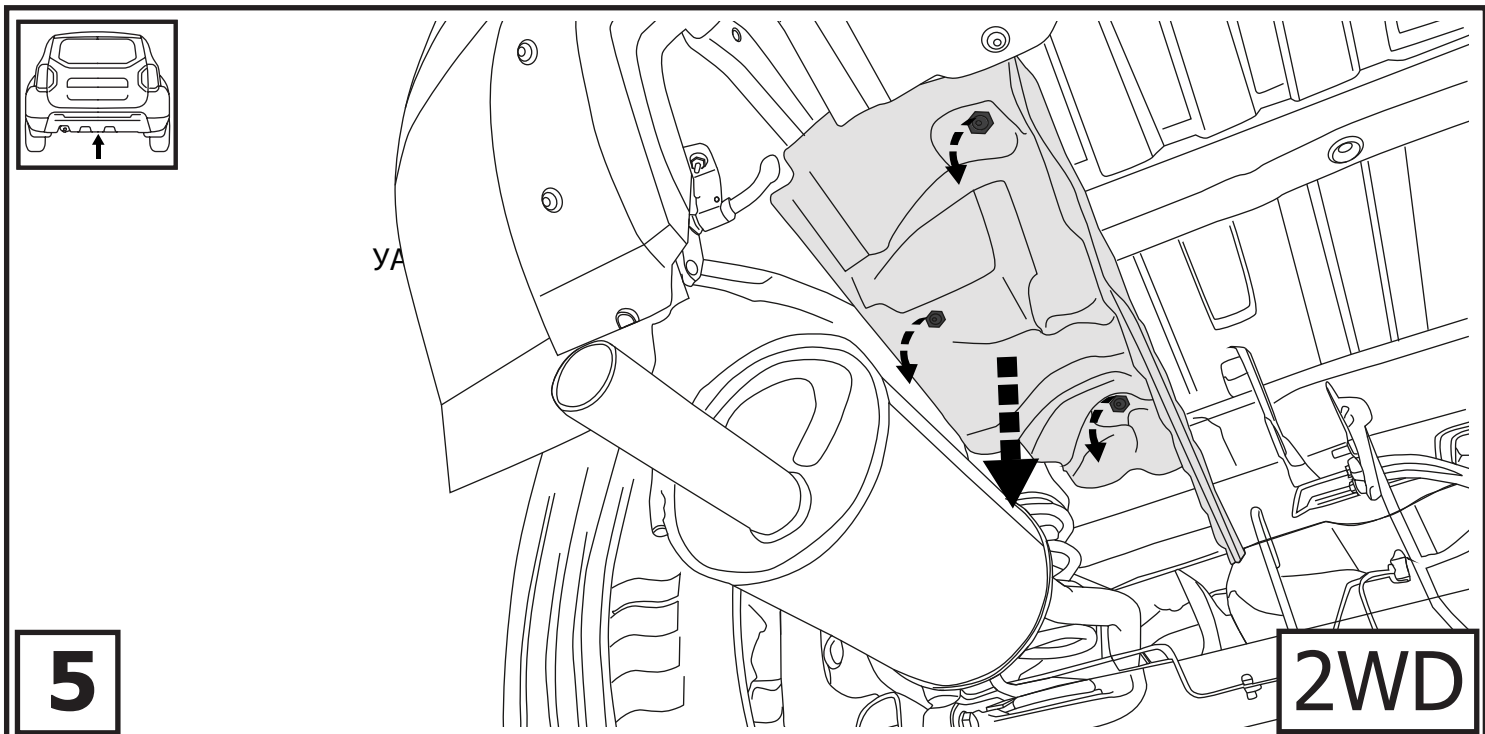

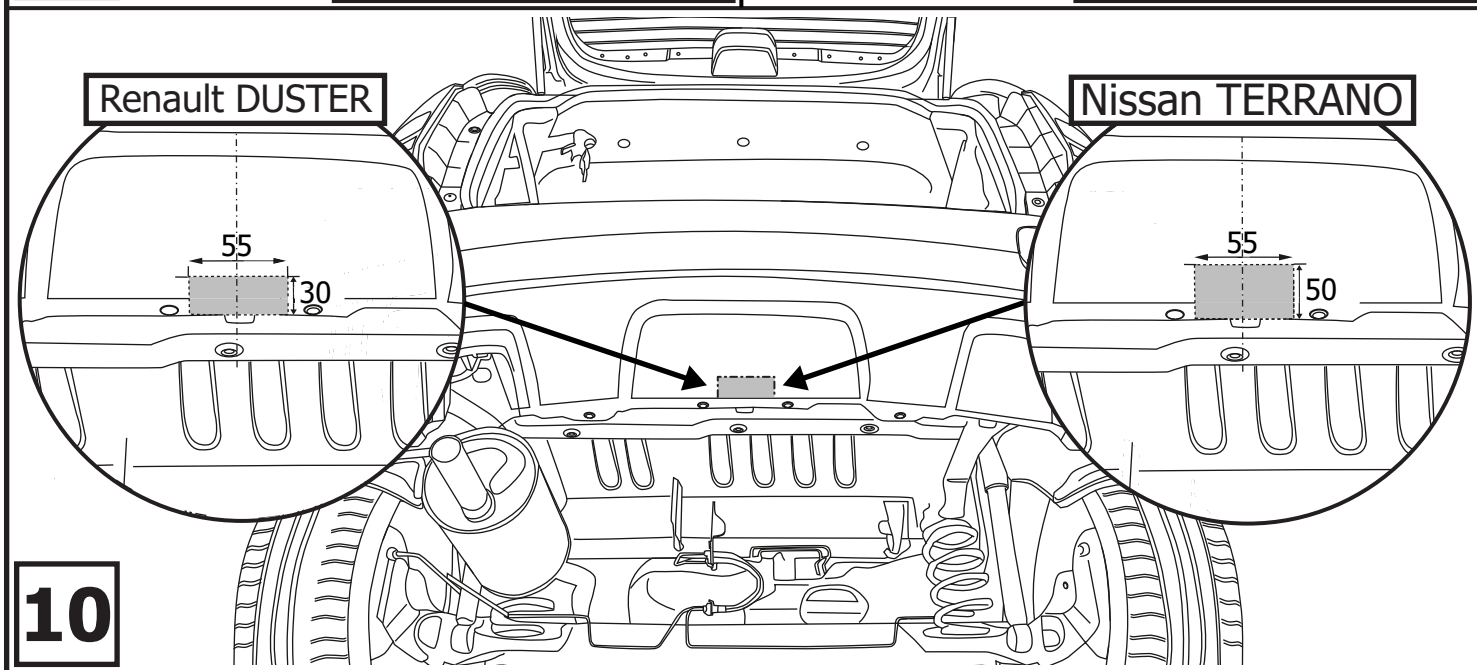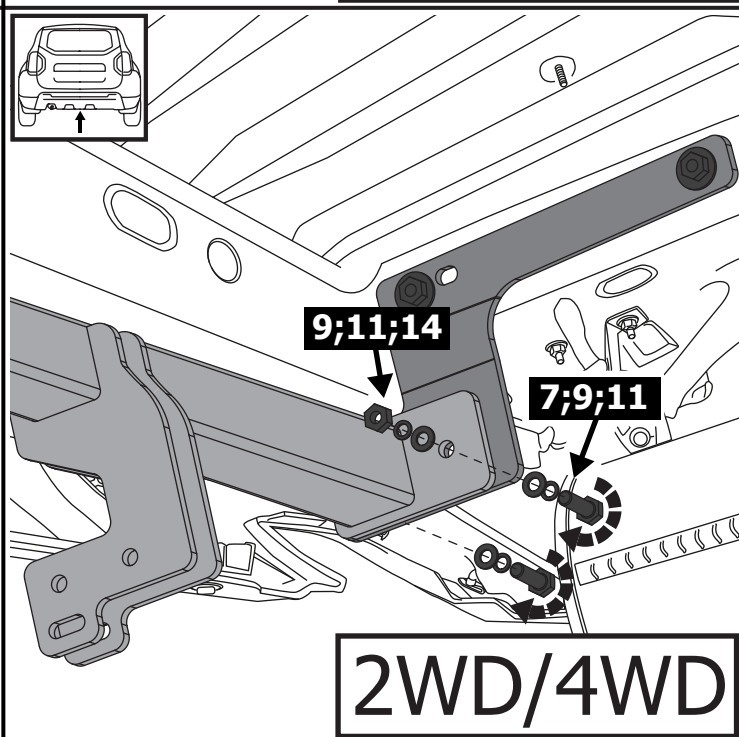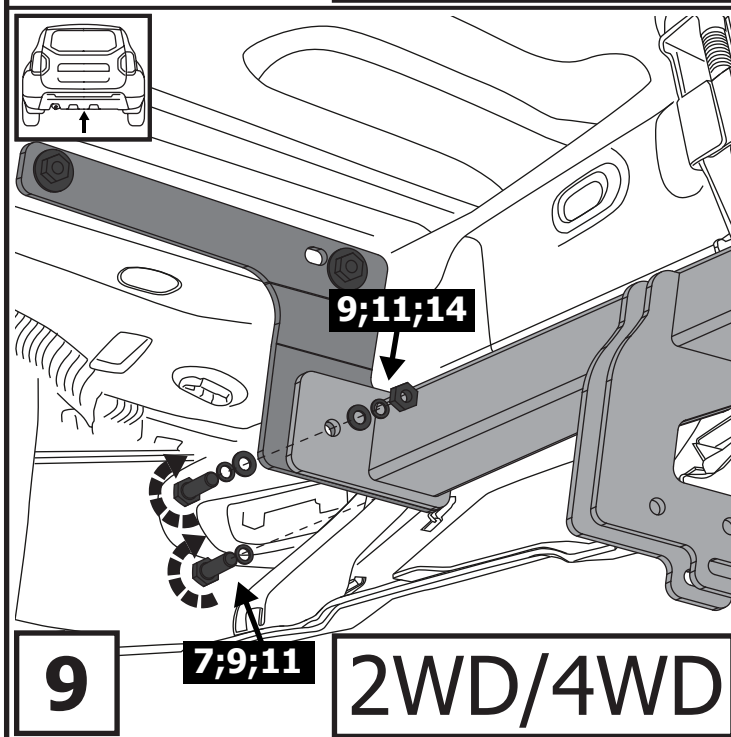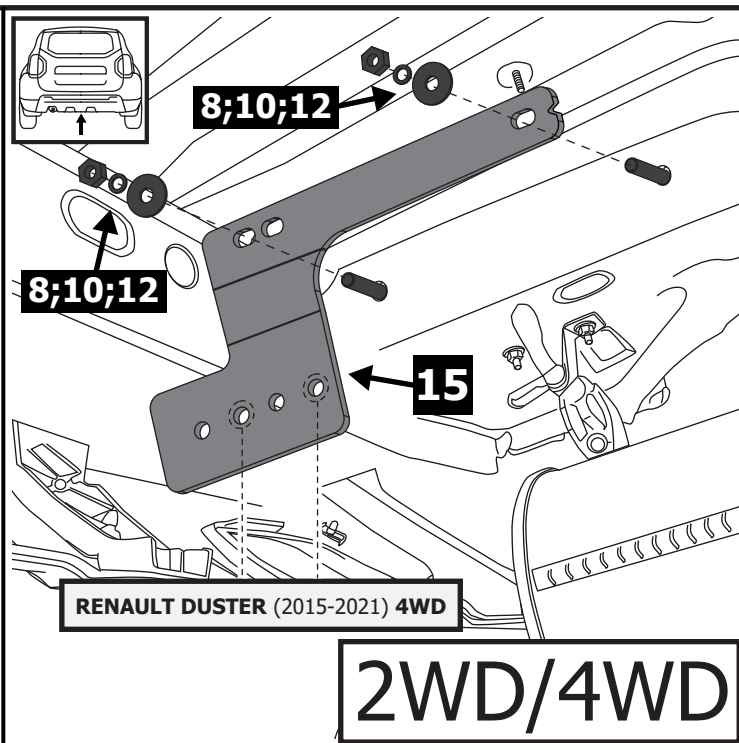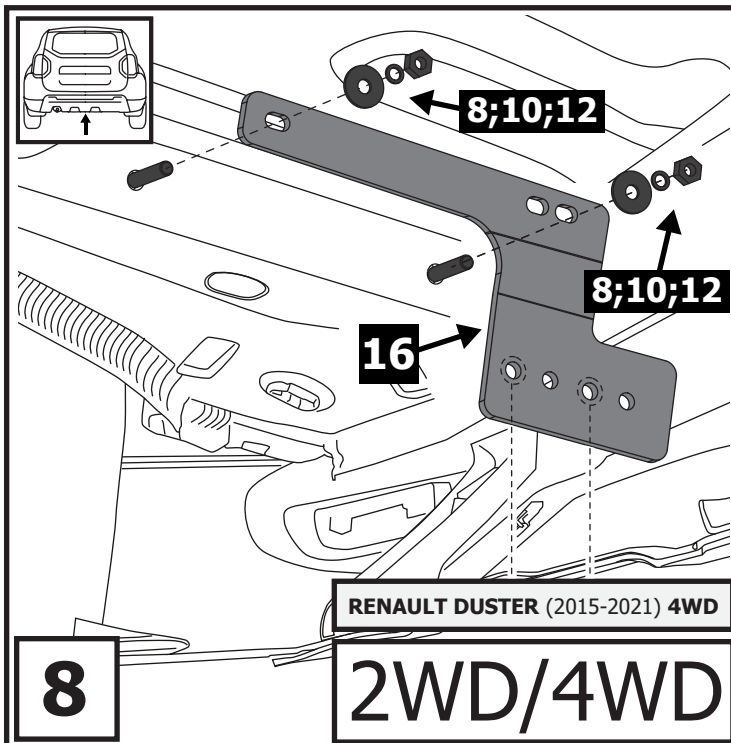




11

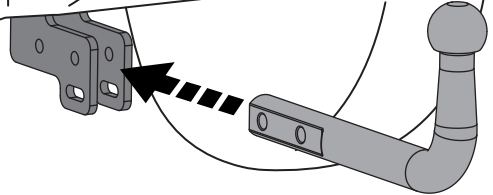

3

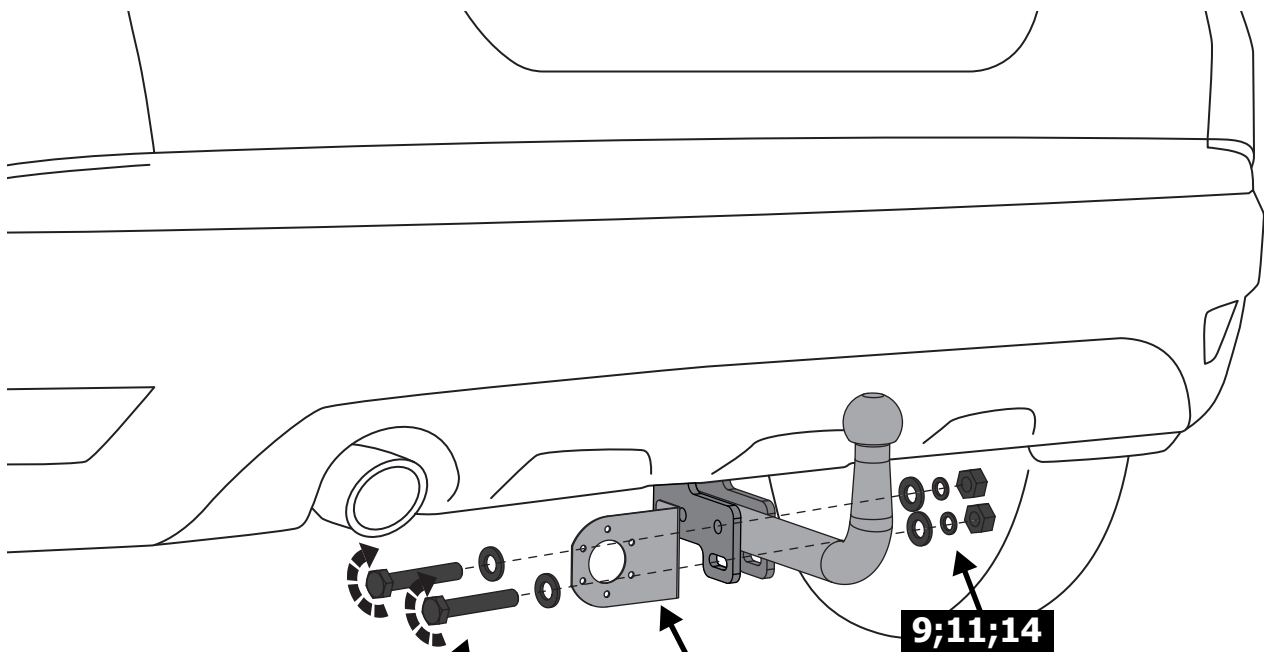


6;11

2

9;11;14

12

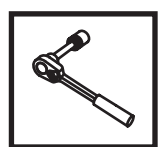

Затянуть все резьбовые соединения
M10 = 47 Nm M12 = 81 Nm